

## CONTENTS

<b>SECTION 1</b>	<b>Introduction</b>	<b>4</b>
<b>SECTION 2</b>	<b>Specification</b>	<b>5</b>
<b>SECTION 3</b>	<b>Operation</b>	<b>7</b>
3.1	Preliminary	7
3.2	Display	7
3.3	Check	7
3.4	Zero	8
3.5	Cal	8
3.6	Voltage Measurements	8
3.7	Current Measurements	8
3.8	Resistance Measurements	8
3.9	Other Facilities	9
<b>SECTION 4</b>	<b>Circuit Description</b>	<b>10</b>
4.1	Power Supply	10
4.2	Display	10
4.3	Analogue to Digital Conversion	10
4.4	DC Ranges	11
4.5	AC to DC Converter	11
4.6	AC Ranges	12
4.7	Current Measurement	12
4.8	Resistance Measurements	12
<b>SECTION 5</b>	<b>Maintenance</b>	<b>13</b>
5.1	Dismantling the instrument	13
5.2	Fuse Replacement	13
5.3	Recalibration	13
5.4	Fault Location	14
<b>SECTION 6</b>	<b>Components List and Illustrations</b>	<b>16</b>
	<b>ILLUSTRATIONS</b>	
Fig. 1	Circuit Diagram	23
Fig. 2	Battery Connections	25
Fig. 3	Printed Circuit Interconnection	25
Fig. 4	Block Diagram	27
Fig. 5	Display Assembly Component Location	28
Fig. 6	Power Supply and Attenuator Assembly Component Location	29
<b>SECTION 7</b>	<b>Guarantee and Service Facilities</b>	<b>30</b>
	<b>Optional Accessories</b>	
	BP2 and SP2 (inside back cover)	

VIEW FROM CABLE END WITH  
COVER REMOVED.

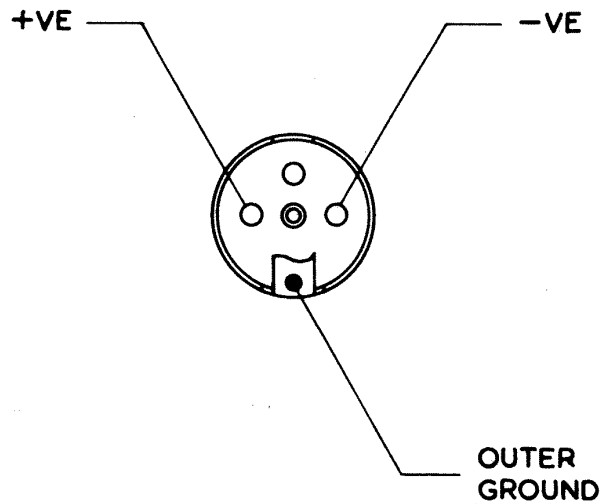


Fig. 2 BATTERY CONNECTIONS

(A) FRONT PANEL to DISPLAY BOARD		
	Check +1V socket	S5b1
Screened lead	{ + Terminal	S2a3
	{ N/C	Screen S1a2
Screened lead	{ - Terminal	S2b3
	{ N/C	Screen S2a2
Screened lead	{ +1kV Terminal	R2A
	{ N/C	Screen 0V

Fig. 3 PRINTED CIRCUIT INTERCONNECTION (A)

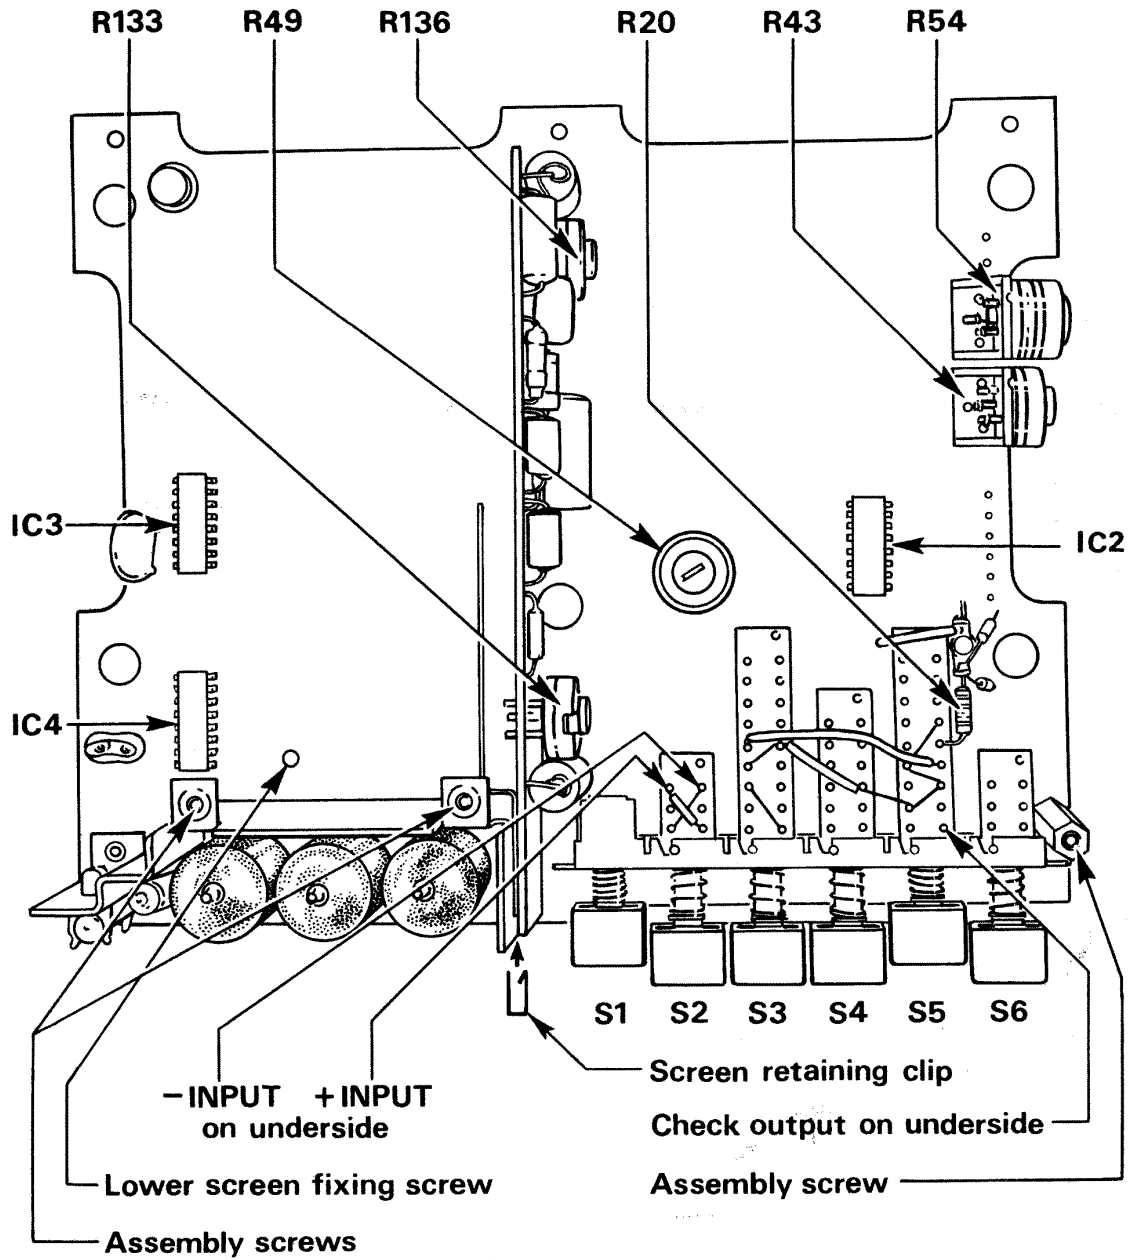


Fig. 5 DISPLAY ASSEMBLY COMPONENT LOCATION