

Start Test

Self Test -

Scope Self Tests

Self Test Instructions

Please disconnect all probes, cables and ESD caps from front panel BNC inputs and then press 'Start Test'.

☐ Service Extensions

Diagnostics

Test Probe Board PASSED.  
Test Temperature Sense PASSED.  
Test Trigger Level PASSED.  
Test Logic Trigger PASSED.  
Test Pattern Trigger PASSED.  
Test State Trigger PASSED.  
Test Time Tag PASSED.  
Test Interpolator PASSED.  
Test Timebase PASSED.  
Test Attenuator Contacts PASSED.  
Test Scroll Mode Counter PASSED.  
Test Non-Volatile SRAM PASSED.  
Test Video Ram PASSED.  
Test Video SRam PASSED.  
Test Tri-state Register PASSED.  
Test Timer PASSED.  
Test Video Control Register PASSED.  
Test Acquisition Status/Control Register PASSED.  
Test Scope Self Tests PASSED.

Close

Help

Print  
Diagnostics